First 7

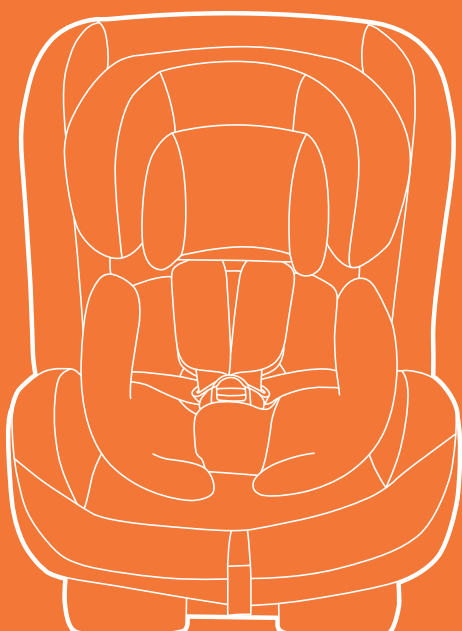

Car-seat Manual

DAIICHI
www.babyseat.net

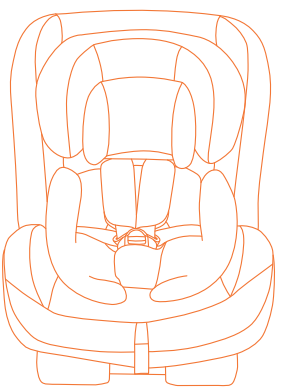

First 7

Car-seat Manual

Table of contents

- For safe use 1
  - About Indicative Marks 1
  - Conditions of children, who can use this product 1
- Before installing safety seat in your car ..... 2 ~ 5
  - Seats that can install the safety seat 2
  - Seats that cannot install the safety seat 2
  - Types of seatbelts for installation 3
  - Deciding direction of safety seat 3
  - Notes ..... 4 ~ 5
- Name of each part ..... 6 ~ 7
- Adjustment method ..... 8 ~ 12
  - How to adjust angle 8
  - How to adjust shoulder belt 9
  - How to use buckle 10
  - How to use locking lever 11
  - How to adjust height of headrest 12
- How to Use Baby Mode ..... 13 ~ 18
  - Age, weight and height of baby for Baby Mode 13
  - Angle adjustment of back support at Baby Mode 14
  - Height adjustment of shoulder belt at Baby Mode 14
  - Height adjustment of headrest at Baby Mode 15
  - Back support cushion and inner seat at Baby Mode 15
  - How to install Baby Mode (Forward facing / front installment) ..... 16 ~ 18
  - Checklist for Baby Mode 18
- How to Use Toddler Mode ..... 19 ~ 26
  - Age, weight and height of baby for Toddler Mode 19
  - Angle adjustment of back support at Toddler Mode 20
  - Height adjustment of shoulder belt at Toddler Mode 20
  - How to use shoulder pad at Toddler Mode ..... 21 ~ 22
  - Height adjustment of headrest at Toddler Mode 23
  - Back support cushion and inner seat at Toddler Mode 23
  - How to install Toddler Mode (Rear facing / rear installment) ..... 24 ~ 26
  - Checklist for Toddler Mode 26
- How to Use Child Mode ..... 27 ~ 31
  - Age, weight and height of baby for Child Mode 27
  - Separation and storage for Child Mode ..... 28 ~ 30
  - How to install Child Mode (How to use seat belt) 31
  - Checklist for Child Mode 31
- Maintenance and management ..... 32 ~ 35
  - How to detach headrest 32
  - How to take off seat cover ..... 32 ~ 33

* **Warning** : Warning label (yellow label) stuck in the front of sewing work cannot be detached. This company does not take any responsibilities for its detachment.

For safe use

- This product is safety equipment for children used in cars, which will reduce shocks to children in case of accidents. However, it cannot perfectly (100%) save children from some cases, so please drive safely to not to cause any accident.

⚠ **Caution** To install it correctly and use it effectively, please read this manual thoroughly before installation or usage.

About Indicative Marks

- To use it safely, this manual has specified important indications to follow with marks. Since it is for your safety, please follow instructions;

Danger	If you do not follow given instructions, you might lose your life or seriously injured.
Warning	If you do not follow given instructions, you might be seriously injured.
Caution	If you do not follow given instructions, you might be insured or cause an accident.
Completion Checked	A checklist that must be checked for safety.
Advice	Basic instructions for safe and pleasant usage.

Application condition *(children who are suitable for this product)*

- Do not use this product for children who cannot fulfill following conditions.

⚠ **Caution** This safety equipment is designed for children from birth to those with weight of 25kg or under.

Classification	Application condition	Other conditions
Baby Mode	**Weight** : 0~13kg (Group 0) **Target age** : Newborn infant	Protect head of the baby by installing rear facing.
Toddler Mode	**Weight** : 9~18 kg (Group 1) **Target age** : 12 months ~ 5 years old	Use for forward facing. Baby's head should not go out the back of seat when the baby seats on the safety seat.
Child Mode	**Weight** : 15~25 kg (Group 2) **Target age** : 4~7 years old	Take off inner seat and 5-point belt of the child safety seat and then use belt of the car.

Before installing the seat in your car

Seats that can install the safety seat

- For more detailed installing method, please refer to method for each mode.

Rear seat (arrow shows the driving direction)		Front seat (arrow shows the driving direction)	
Rear facing	Forward facing	Rear facing	Forward facing

- Child safety seat can be installed in both front and rear seats, but it is recommend to install in the rear seat for better safety.

⚠ Danger Do not install in the seats with airbag.
Due to operation of the airbag you might lose child's life or seriously injured.

⚠ Danger When you equip the seat at front seat in rear facing, it might interfere your driving.
Please use it at the rear seat.

Seats that cannot install the safety seat

⚠ Danger If you cannot install the safety seat as the given instruction due to different belt type or seat's shape, please install it at other seats. When the safety seat is not properly installed as the instruction, you might lose child's life or seriously injured when the car crashes or suddenly stops.

- Seats with airbag (when airbag comes out, you might lose your child's life or seriously injured)
- Seats without seatbelt (Child safety seat cannot be fastened)
- Seats placed in sideways or opposite directions from driving directions (Difficult to absorb crash impact)
- Width and length of seat is 45 cm or less (Child safety seat will be installed unstably)
- Front center seats and any other seats that may interfere with driving when the safety seat is installed (In some cases, it is hard to guarantee safety of passengers)
- Seats with seat belt located in the middle of the seat (Child safety seat cannot be fastened strongly) refer to drawing①
- Seats with belt buckles that are highly placed and are unable to fasten the child safety seat (Child safety seat cannot be fastened) refer to drawing②
- Seats with 2-point seatbelt (Child safety seat cannot be fastened) refer to drawing③

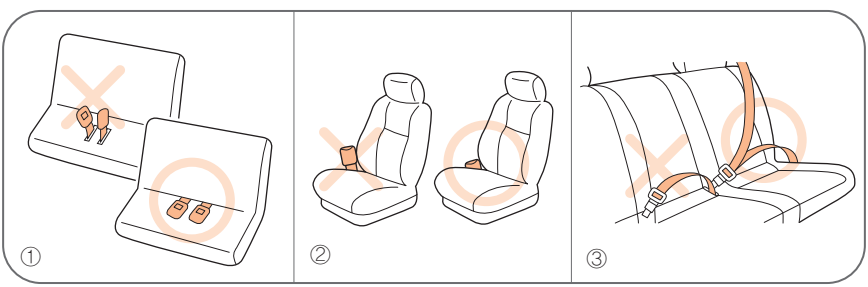

Types of seatbelts for installation

☆ First of all, please check the type of seat belt in the car.

- Please use it only for 3-point seat belt that is approved by ECE NO16 or same regulation.
- This safety seat cannot be equipped with 2-point seat belt.

Classification	Special features	Precautions for installation	Possibility of installation
ELR·ALR 3-point safety belt (Belt fastening equipment with safety seat installation function)	In general, ELR belt will fix the safety seat, but if you take out the entire belt, ALR function will be started, which will be automatically fastened. Also, when all the belts are fastened, ELR function will start.	Fasten the child safety seat firmly, and then take out all the seatbelt to start ALR function. ⚠ Caution Before starting installation, read manual of the car.	O
ELR 3-point safety belt (Automatic belt fastening equipment)	In general, belt will fasten and unfasten freely, but the belt will not move when it detects any shock (such as sudden stop).	Child safety seat should be tightly fastened with locking lever.	O
ALR 3-point safety belt (Automatic belt fastening equipment)	If you stop your hand while taking out the belt, the belt will be automatically locked up and will not be pulled out.	In order to fix child safety seat, take out the belt as much as required at once. Then, secure child safety seat with locking lever.	O
ELR Safety belt	ELR safety belt without shoulder part.	Cannot install the child safety seat.	X
NLR 2-point safety belt (Non-fastening belt)	No fastening option, but instead, adjust the length of belt after pulling out the whole belt.	Cannot install the child safety seat.	X
Automatic seat belt	A system that will automatically fasten up the belt when the door is closed and unfasten when the door is open.	Cannot install the child safety seat.	X
NR 2-point safety belt (manual)	Safety belt without fastening function.	Cannot install the child safety seat.	X
All other seatbelt	All other types of seatbelt that are not stated in this table.	Cannot install the child safety seat.	X

⚠ Danger For cars with airbags, children who weigh 13kg or under should be seated in the rear seat. We recommend those children between 9 to 25kg to seat in the rear side as well.

Deciding direction of safety seat

☆ Choose direction of installation according to weights of children.

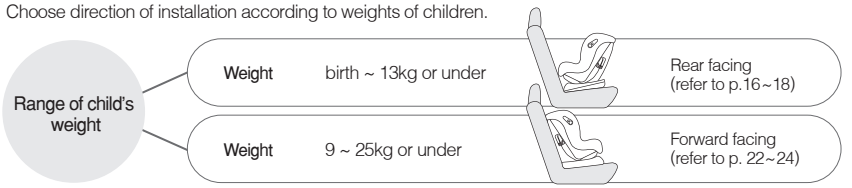

Caution

The user manual needs to be kept well and read accordingly when necessary.

⚠ Danger

The infant safety seat needs to be attached according to the user manual. If the seat is attached inappropriately, the infant maybe loosened from the car or hit the glass, for example, during the crash or the ab the abrupt stopping, risking his or her life, or suffering serious damage.

Only suitable for use in the listed vehicles fitted with 3-point with retractor safety-belts, approved to ECE Regulation No.16 or other eauivalent standards.
(strike out what dies not apply)

Every time the infant is seated the adjusting belt should be pulled to seat the baby tightly. If the shoulder belt can not function as originally designed, the infant may risk his or her life, or suffering critical damage.

The belt cover should be attached for use. If the belt cover can not function as originally designed, the infant may risk his or her life, or suffering critical damage.

If the infant safety seat is exposed to direct sunlight for long hours, metal and PVC parts may get heated. The guardian needs to check it before seating the infant. In summer or when sunlight is strong, the car needs to be parked in a shady lot, or a towel, for example, can be used for coverage.

When the chair is not provided with a textile cover, it shall be recommended that the chair should be kept away from sunlight, otherwise it may be too hot for the child's skin.

The product should not be used for the seats with an airbag. When activated, the airbag may cause the infant to risk his or her life, or suffer serious damage.

Be careful not to allow the infant to push the press button of the front pad. The fastening plate needs to be checked for any loosening frequently. When the plate is loosened, the infant may risk his or her life, or suffer critical damage when a crash or an abrupt stopping occurs.

It shall be recommended that the device should be changed when it has been subject to violent stresses in an accident.

Store the child seat in a safe place when it is not being used.
Avoid placing heavy objects on the top of the child seat.

It shall be recommended that children are not left in their child restraint system unattended.

⚠ Warning

When the infant safety seat is installed on the passenger's seat, it may cause some interference, leading to inconve nience in operating the transmission gear or the side brake.
When such inconvenience arises, you need to refrain from using the product for the passenger's seat, and rather use it for the backseats.
When such inconvenience is caused, it may interfere with operating the transmission gear or the side brake, leading to a highly risky situation.

When there is a passenger in the back seat, the safety seat should not be fastened to the passenger seat of a 2-door or 3-door vehicle, or the secondary seat near the access area for ascending and descending in case of the one box type vehicle or a mini-van, in order to secure the emergency exit.

When there is no infant in the vehicle, the infant safety seat needs to be stored, for example, in the trunk, or fastened strongly within in a car.
When fastened insufficiently, the safety seat may be shaking, causing interference with driving.

While driving, you should not operate the infant safety seat(Belt adjustment /Angle adjustment, for example).
The car should be parked in a safe place first before you operate the safety seat. If you operate the safety seat while driving, it is highly dangero us, because your driving will be interfered with, possibly leading to an accident.

Never try to modify the children seat without authorization by the manufac turer or the approving authority.

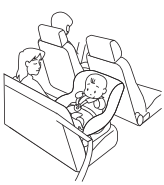

When using the product for a new - born baby (Younger than 1 month after birth), a fellow passenger, not just the driver, needs to get on the vehicle to pay attention to the baby. Avoid using the product for longer than one hour consecutively, in case of infants ranging from newborn babies to ones younger than 6 months, considering the burden on them.

⚠ Caution

When you need to ride together with an infant, you should check the attachment of the safety seat again before driving the vehicle.
The safety seat needs to be checked for any problems during or after the driving (The vehicle should be parked in a safe place first before the check ing).

The safety seat should not be installed or removed while the infant is on it.

Be careful not to allow the infant to play on the safety seat. You should not allow the infant to use it as a play apparatus.

It shall be recommended that any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.

Name of each part

Front of safety seat

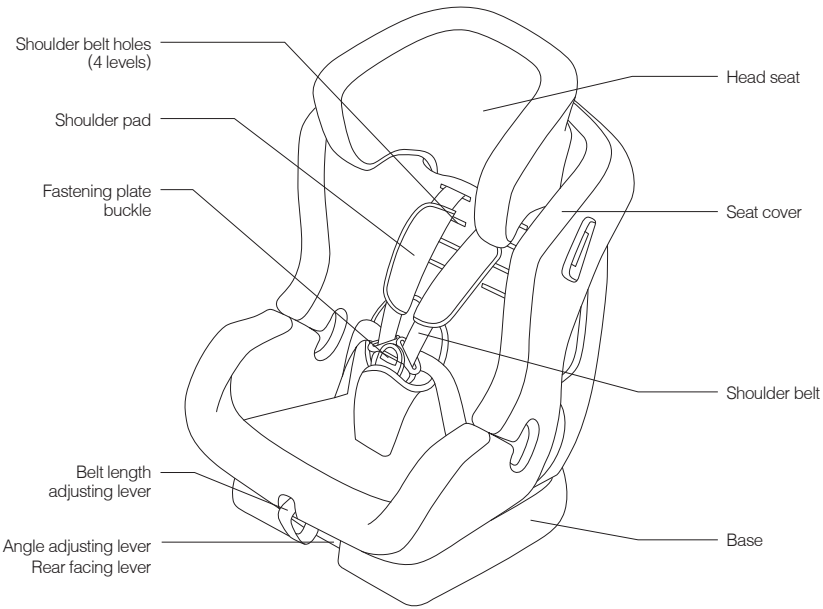

Accessories

☆ Design of the inner seat can be different according to types of models.


Manual


Head inner seat

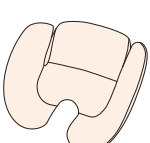
Inner seat

Shoulder pad for toddler

Back of safety seat

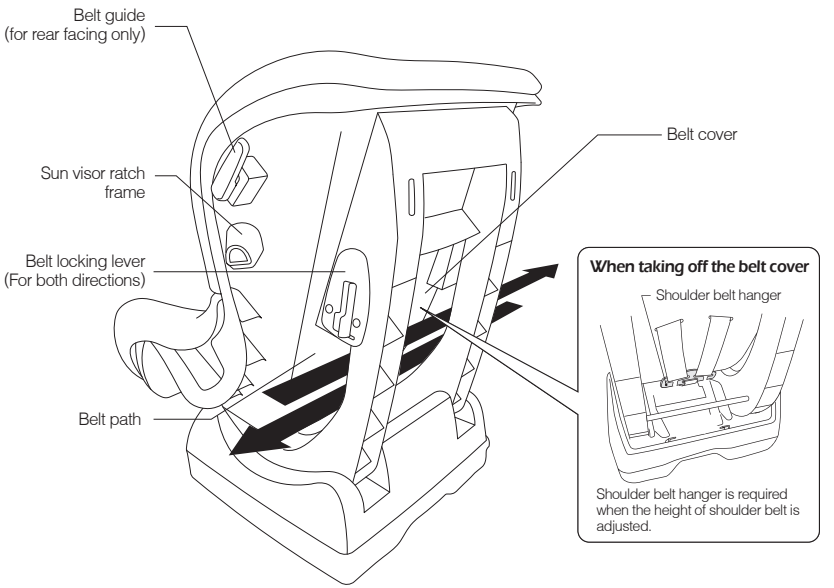

MEMO

Adjustment method

⚠ **Warning** Please stop the car to adjust each function.
Adjusting the safety seat during driving will interrupt your driving and might cause accidents.

How to adjust angle

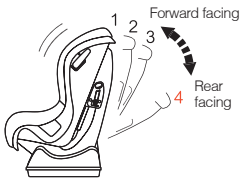

- You can adjust angles in 4 different levels. For forward facing, use levels 1~3 and level 4 is only for facing to rear.
- Levels 1~3 should be adjusted according to seat's angle of the car.

● Angle adjustment for rear facing

For child with weight of 13 kg or under

When you set your child safety seat to rear facing, please adjust the angle to level 4.

1

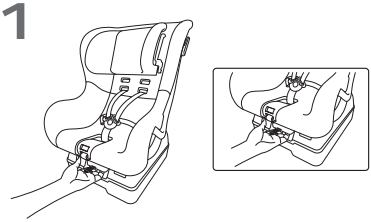

Pull out the angle adjusting lever and then push it to the back.

2

Lay down the main body of the seat to level 4 (lowest level).
(To check the right angle, refer to the arrow on the side of the main body.)

● Angle adjustment for forward facing

For child with weight from 9 to 25 kg

When you set your child safety seat in forward facing, adjust angles between level 1 and 3.

1

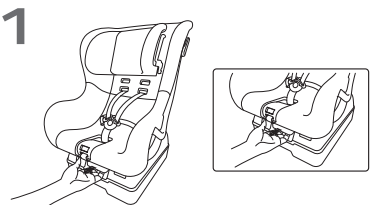

Pull out the angle adjusting lever and then push it to the back.

2

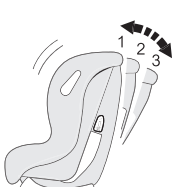

Adjust the main body according to seat's angle of the car from level 1 to 3.
(To check the right angle, refer to the arrow on the side of the main body.)

How to adjust shoulder belt

⚠ Warning Please stop the car to adjust each function.
Adjusting the safety seat during driving will interrupt your driving and might cause accidents.

1

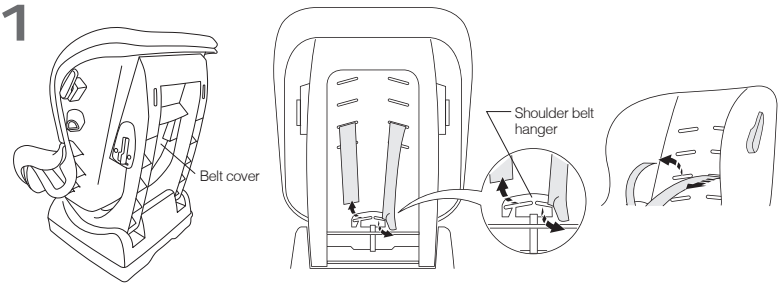

Take off the belt cover at the back of main body to pull out the shoulder belt from its hanger.

⚠ Caution When you cannot see the shoulder belt hanger, pull out the front belt
so shoulder belt hanger at the back can come out to front to adjust height of belt.

2

Put baby in the seat and
then insert the belt to the nearest shoulder belt hole.

3

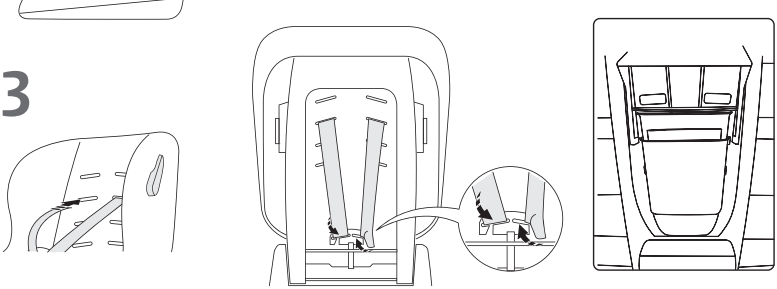

After inserting the belt into its hanger, put on the belt cover.

⚠ Danger Belt cover should be attach ed for use.
If the belt cannot perform its function properly, it might risk a life or serious injury.

How to use buckle

⚠ Danger Using the safety seat without buckle is very dangerous, so do not use the seat after unfastening buckle.

● Unfastening

1

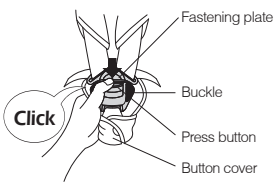

Press the press button inside buckle of button cover to take off fastening plate.

2

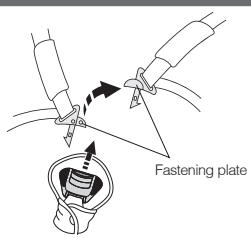

Separate joined fastening plate into upper and lower units.

● Fastening

1

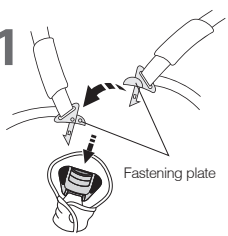

Put two fastening plates together, one in below other on top.

2

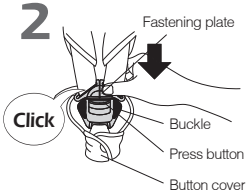

Insert the joined fastening plate into the buckle until you hear 'click' sound.

3

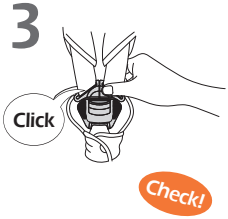

Make sure the fastening plate is securely fastened.

● How to use buckle fastening magnet

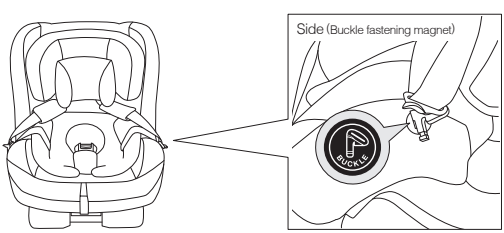

Before putting your baby into the seat, unfasten buckle and put it on the armrest part – it will be easier to let your baby to seat.

How to use locking lever

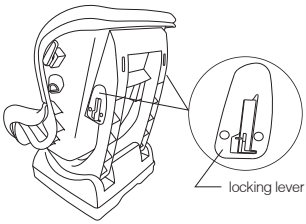

- Locking lever is an equipment to securely install the child safety seat into your car. Please use it.
- You will find 2 locking levers, one on each side of the main body. Please use it according to location of installment.

⚠ Danger Locking lever and belt guide are equipments for secure installment of child safety seat with car's seat belt. Please use it. If you do not use it, safety seat might be in danger, as it would not be tightened up for shocks and abrupt stop.

⚠ Danger Firstly, check if your car seat can install this child safety seat (refer to p.2 as some seats are not allowed to install this product). If you cannot install safety seat as shown in this manual, do not force it to fasten up. In this case, the safety seat might not work properly and cause unexpected accident.

⚠ Caution When you adjust locking lever, please be careful not to jam your finger.

● Fastening

1

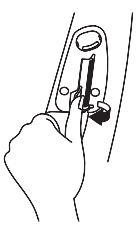

Push the locking lever to the side.

2

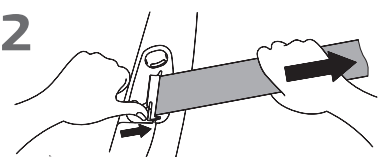

Pull shoulder part of car's seat belt to make it tight as much as possible and insert it into locking lever. Then, pull the lever to opposite direction and push to lock.

3

For rear facing

As shown above, fix the belt with locking lever, and then pull out the belt as much as possible and hang it on belt guide

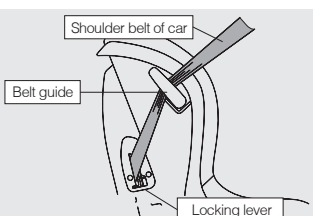

● Unfastening

1

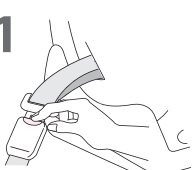

Unfasten buckle of car's seat belt.

2

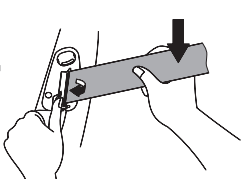

Push locking lever to the side and then separate car's belt.

How to adjust height of headrest

⚠ Danger Using the safety seat without the buckle is very dangerous, so do not use the seat after unfastening the buckle.

1

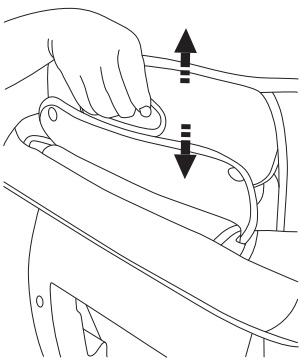

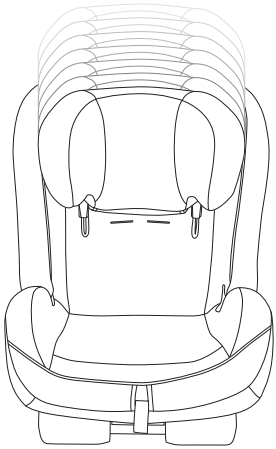

Pull up adjusting lever in the middle of backside of headrest to adjust height (up and down).
Headrest can be adjusted in 7 different levels.

2

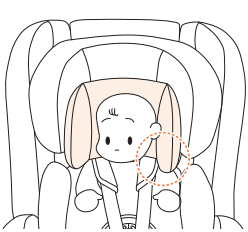

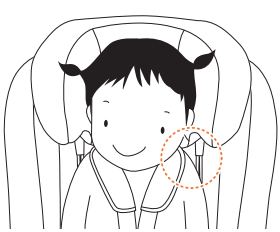

Lower part of headrest should be in the closest location from baby's shoulder.

⚠ Caution Please adjust location of headrest according to size of the baby.
Otherwise, safety seat might not give the best result.

First7

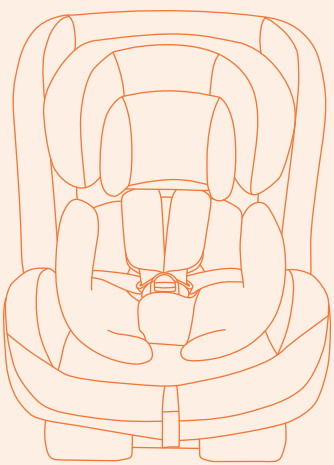

How to use
BABY MODE

Baby Mode is designed for children
aged 0 to 1 with maximum weight of 13kg.

How to Use Baby Mode

Angle adjustment of back support at Baby Mode

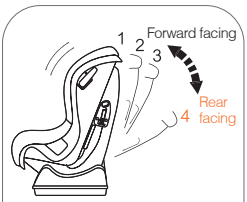

Set the child safety seat to angle of level 4, which is for rear facing.

1

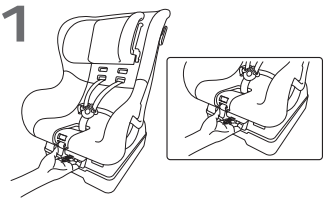

Pull out rear facing lever (angle adjusting lever) and then push it to the back.

2

Lay down the main body of the seat to level 4 (lowest level). To check the right angle, refer to the arrow on the side of the main body.

Tight attachment of shoulder belt at Baby Mode

⚠ Danger Whenever you seat the baby in the safety seat, pull out adjustment belt to tightly buckle up the baby. If the belt cannot perform its function properly, it might risk a life or cause serious injury.

1

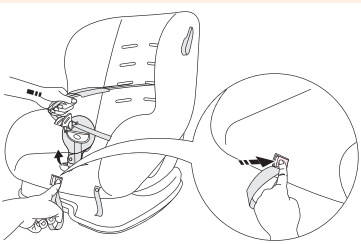

Unfasten buckle of front pad. Pull out shoulder pad while pressing adjustment button of the belt.

(Refer to 'How to use buckle' on p.10)

2

Seat the baby and then put on shoulder belt. Remember to adjust height of shoulder belt according to height of your baby's shoulder.

(Refer to 'Height adjustment of shoulder belt' on p.9)

3

Fasten up front pad and buckle.

4

Pull out adjustment belt while pressing adjustment button to securely fasten up shoulder belt to the baby.

⚠ Caution Between the belt and the baby, make a gap that allows adult's hand to move around

Height adjustment of headrest at Baby Mode

⚠ **Caution** Headrest should have a room of 3 cm higher from top of the baby.

1

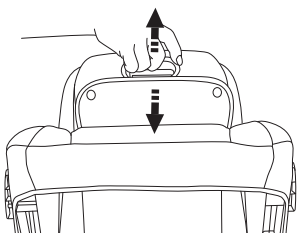

Pull up adjusting lever in the middle of backside of headrest to adjust height (up and down).

2

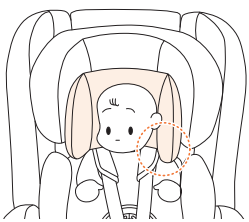

Lower part of headrest should be in the closest location from baby's shoulder.

3

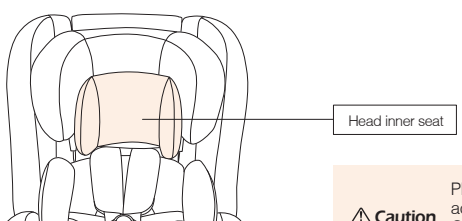

Use head inner seat of headrest together.

⚠ **Caution** Please adjust location of headrest according to size of the baby. Otherwise, safety seat might not give the best result.

Back support cushion and inner seat at Baby Mode

1

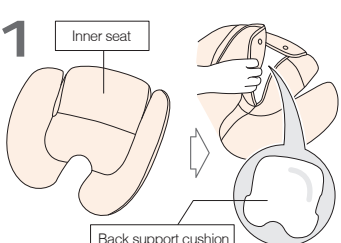

If your child weighs over 10kg and feels uncomfortable with inner seat, remove back support cushion inside inner seat.

2

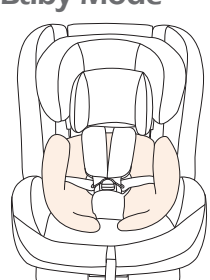

At Baby Mode, use both back support cushion and inner seat as much as possible.

How to install Baby Mode (Rear facing/rear installment)

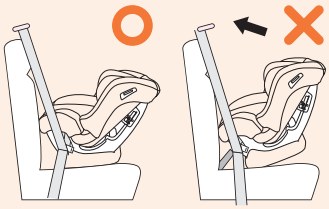

⚠ Danger According to types of car's seat belt, installment and fixing methods vary. Please refer to check possible and impossible seats for installment on p. 3 and then install child safety seat in a right way.

⚠ Warning For ELR/ALR 3-point safety belt, switch to ALR function after installment. Do not fasten up shoulder belt too tightly. If you have tightened up like shown on the diagram, please re-start installment from start.

⚠ Caution When you adjust locking lever, please be careful not to jam your finger.

1

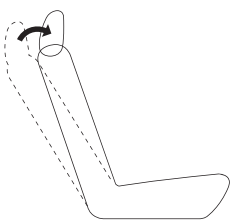

Pull the seat back to full upright position.

2

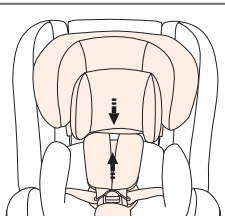

Adjust height of shoulder belt and headrest according to the baby.

3

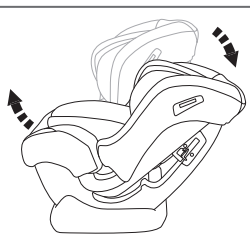

With angle adjusting lever,
change angle of the main body to level 4.

4

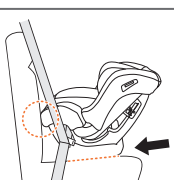

Put main body in opposite direction (rear facing) of driving.
Make sure the bottom of safety seat to closely touch car's seat as shown on the diagram.

5

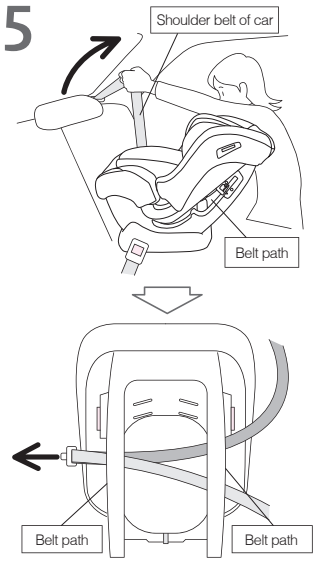

Push the safety seat to contact the back of seat and then pull out the car's seat belt.

Then, let the pulled out belt and fastening plate of the belt to pass through belt path in the backside of main body.

⚠ **Caution** Be careful not to twist the car's seat belt.

6

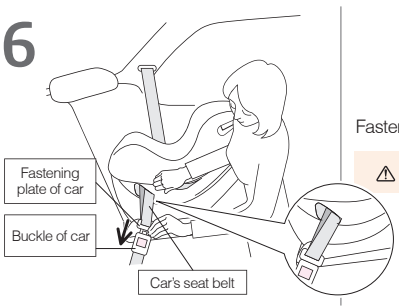

Fasten the fastening plate into the buckle.

⚠ **Caution** Be careful not to twist the car's seat belt.

7

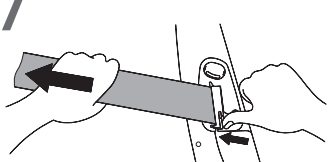

8

7
Push the locking lever located on the opposite side of fastening plate to open.

8
Pull shoulder part of car's seat belt to make it tight as much as possible and insert it into locking lever.
Then, pull the lever to opposite direction and push to lock.
(Make sure to put the belt inside the locking lever and then push the lever strongly, so it can hold the belt tightly.)

⚠ **Caution** Waist belt of car should be tightened up to the maximum for firm fixation, so it would not swing.

9

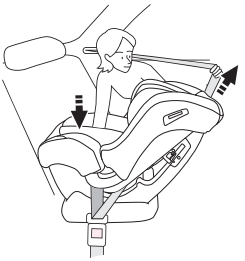

Firstly, make sure whether shoulder belt of car is properly inserted into the locking lever.

Put your weight to the safety seat, and then strongly pull the shoulder belt of car while pushing belt locking lever on side to fix it.

10

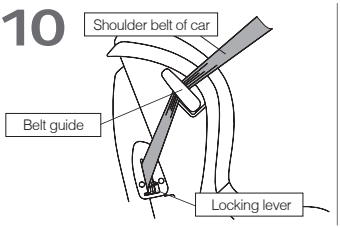

For double fixation, hang the fixed belt inside belt guide. You will get crease on the belt, but there is no problem with safety.

Checklist for Baby Mode

☆ Please check the below list after completing the installation.

- Installment diagram viewed from outside the car

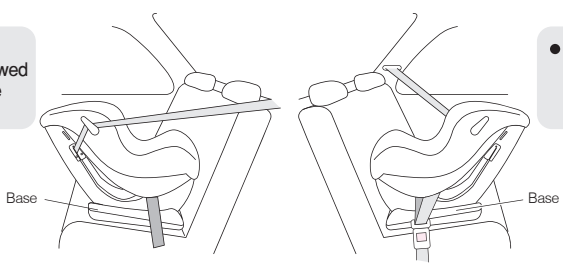

- Installment diagram viewed from inside the car

Completion Checked

- ☐ Are height of shoulder belt and headrest of safety seat suitable?
- ☐ Are fastening plate and buckle of car's seat belt securely fastened up?
- ☐ Is not car's seat belt twisted?
- ☐ Is car's seat belt tightly fastened up?
- ☐ Is shoulder belt of car fastened strongly inside the locking lever?
- ☐ Does the main body swing more than 3cm when you shake it?

☆ Check the above list and if the main body swings more than 3cm, please re-install it according to above instruction.

First 7

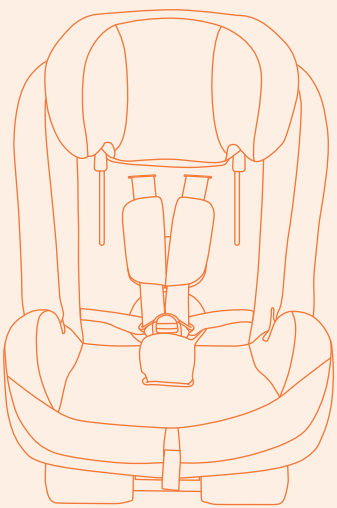

How to use
TODDLER MODE

Toddler mode is designed for children
aged 1 to 4 with weight from 9 to 18kg.

How to Use Toddler Mode

Angle adjustment of back support at Toddler Mode

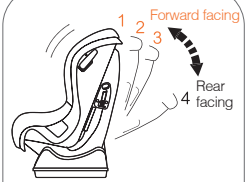

For Toddler Mode, angle of safety seat should be adjusted from level 1 to 3.

1

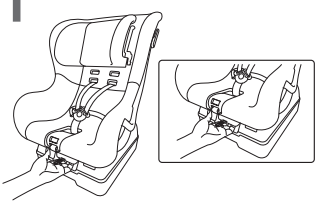

Pull out the angle adjusting lever and then push it to the back.

2

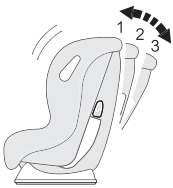

Adjust the main body according to seat's angle of the car from level 1 to 3.

Height adjustment of shoulder belt at Toddler Mode

⚠ **Caution** Please adjust location of shoulder belt according to size of the baby. Otherwise, safety chair might not give the best result.

1

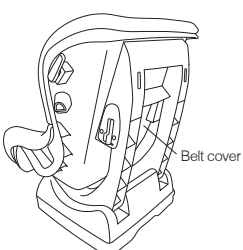

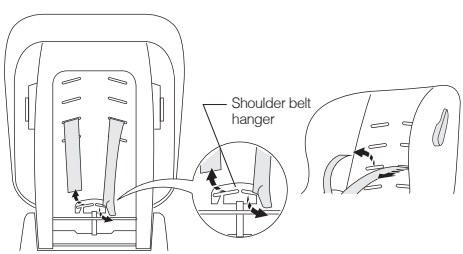

Take off belt cover from back of the main body, and then take out shoulder belt from its hanger.

⚠ **Caution** If you cannot see shoulder belt hanger, pull out the front belt and shoulder belt hanger will come out from the back. Then, you can adjust height of the belt.

2

Put the baby in safety seat, insert the belt into the nearest shoulder belt hole.

3

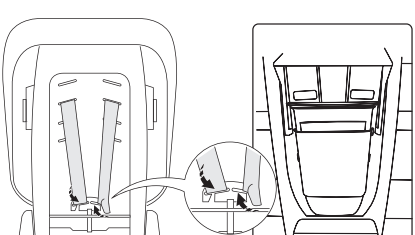

Insert the belt into belt hanger and then put on the belt cover.

⚠ **Danger** Belt cover should be attached for use.
If the belt cannot perform its function properly, it might risk a life or cause serious injury.

How to use shoulder pad at Toddler Mode

⚠ **Caution** Shoulder pad for toddler should be used for the toddler mode only (For 9kg or above and forward facing)

1

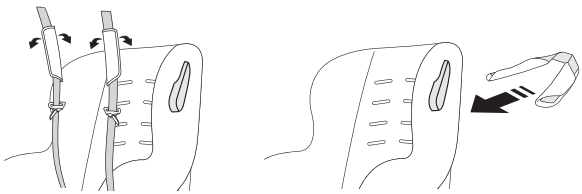

Take off existing shoulder pad, put out shoulder belt from shoulder belt hanger of the backside.
From back of the safety seat, put shoulder pad for toddler into shoulder belt hole.
(Refer to height adjustment of shoulder belt at Toddler Mode on p. 20)

2

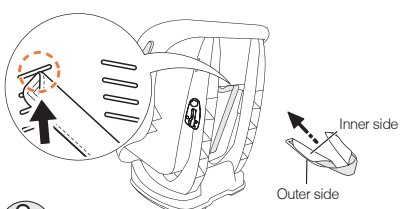

Advice As shown on the diagram, if you insert shoulder pad with twisted side, it will get through smoothly.

As shown in the diagram,
insert the shoulder belt at the same level
as baby's shoulder or a little above.

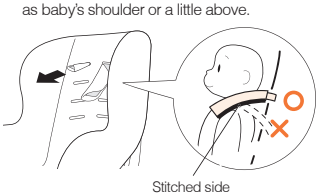

At this stage, put shoulder pad for toddler into shoulder belt hole that is similar in height of your baby.
Stitched side should face ground. (Refer to above diagram)

⚠ **Warning** Rubber part should be closely attached to the baby.
⚠ **Caution** Shoulder pad should be inserted into holes in the same height.

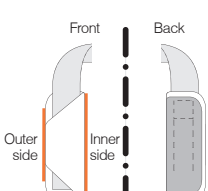

☆ Shoulder pad has inner and outer sides.
☆ Cotton part is front and rubber part is back for shoulder pad.

3

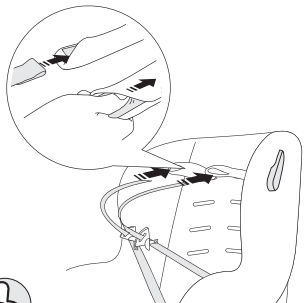

Advice Shoulder belt will get through smoothly if you push it gently with your thumb.

Insert shoulder belt into shoulder pad for toddlers.

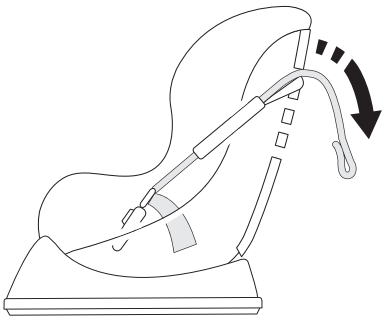

Shoulder belt with the shoulder pad should be inserted into shoulder belt hole at the back of safety seat.

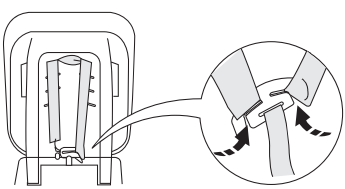

Put shoulder belt into shoulder belt hanger.

Completed!

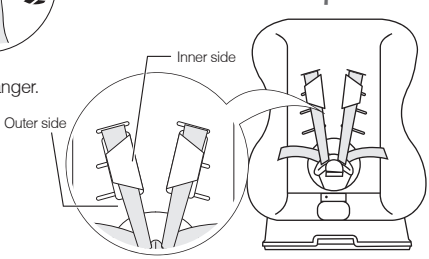

⚠ **Caution** Shoulder belt should not be twisted and hanged on the shoulder belt hanger.

⚠ **Warning** Seat the baby into safety seat, pull out lower adjustment belt to make baby to seat firmly (refer to Tight attachment of shoulder pad at Baby Mode on p.14). If the belt cannot perform its function properly, it might risk a life or serious injury.

⚠ **Warning** Belt cover should be attached for use. If the belt cannot perform its function properly, it might risk a life or serious injury.

Height adjustment of headrest at Toddler Mode

⚠ **Caution** Headrest should have a room of 3 cm higher from top of the baby.

1

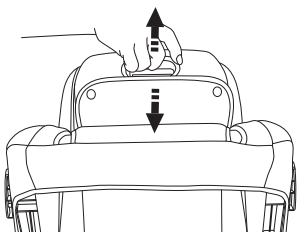

Pull up adjusting lever in the middle of backside of headrest to adjust height (up and down).

2

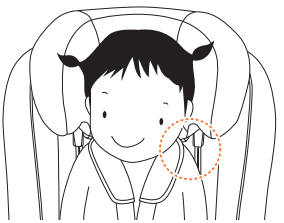

Lower part of headrest should be in the closest location from baby's shoulder.

3

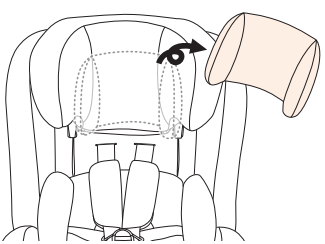

Use head inner seat of headrest together.

⚠ **Caution**

Please adjust location of headrest according to size of the baby.

Otherwise, safety chair might not give the best result.

Back support cushion and inner seat at Baby Mode

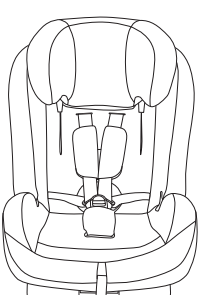

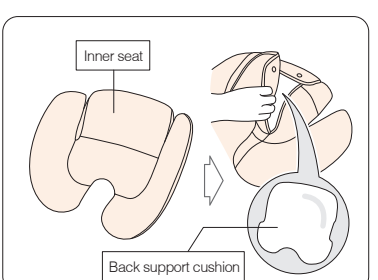

If the safety seat is narrower compared to baby's size at Toddler Mode, take off back support cushion and inner seat.

How to install Toddler Mode (Forward facing / front installment)

☆ With 3-point car's seat belt, install the baby seat forward facing.

⚠ Danger	Do not install in the seats with airbag. Due to operation of the airbag you might lose your child's life or seriously injured.
⚠ Warning	When the baby seat is installed on side seat of driver, it might be difficult to change gears or side break. In this case, do not install it on side seat of driver, and install it at the back seat. It will be very dangerous if you continue to drive with these difficulties of gear change or side break.
⚠ Warning	When the baby seat is installed in front, it might cover side mirror on the right door, which will block out driver's sight. In this case, install the baby seat in other seats.
⚠ Warning	When it is installed at the back seat, make sure not to install at side seat of 2 & 3-door vehicles and 1 box car and folding seats of mini van, since it will block out exit for the case of emergency.

1

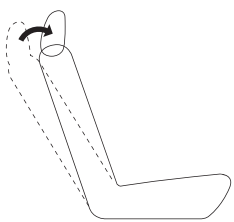

Pull the seat back to full upright position.

2

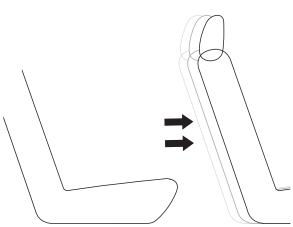

For easier installation, push the front seat to the front.

3

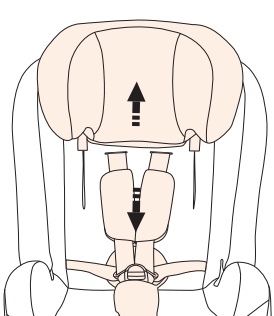

Adjust height of shoulder belt and headrest according to the baby.

4

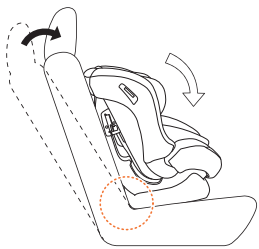

Put the main body in same direction (forward facing) as driving.

5

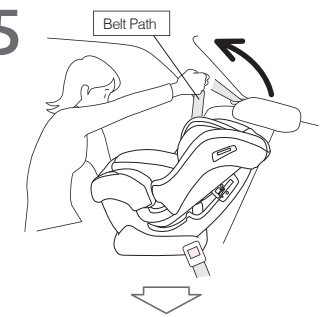

Pull out car's seat belt and then let it go through the belt path, which is located in the backside of the main body.

⚠ **Caution** Be careful not to twist the car's seat belt.

6

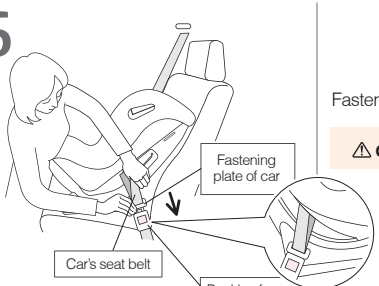

Fasten the fastening plate into the buckle.

⚠ **Caution** Be careful not to twist the car's seat belt.

7

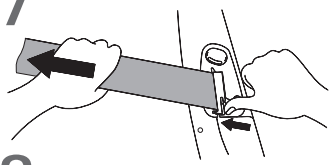

8

7

Push the locking lever located on the opposite side of fastening plate to open.

8

Pull shoulder part of car's seat belt to make it tight as much as possible and insert it into locking lever.
Then, pull the lever to opposite direction and push to lock.
(Make sure to put the belt inside the locking lever and then push the lever strongly, so it can hold the belt tightly.)

⚠ Caution Waist belt of car should be fastened up to the maximum for firm fixation, so it would not swing.

9

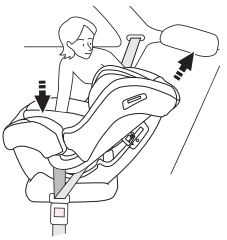

Firstly, make sure shoulder belt of car is properly inserted into the locking lever. Put your weight to the safety seat, and then strongly pull the shoulder belt of car while pushing belt locking lever on side to fix it.

Checklist for Toddler Mode

☆ Please check the below list after completing the installation.

● Installment diagram viewed from outside the car

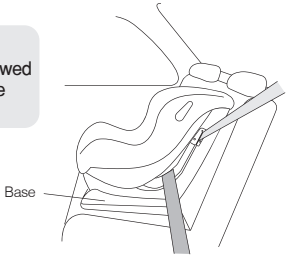

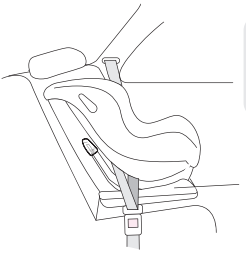

● Installment diagram viewed from inside the car

- ☐ Are height of shoulder belt and headrest of safety seat suitable?
- ☐ Are fastening plate and buckle of car's seat belt securely fastened up?
- ☐ Is not car's seat belt twisted?
- ☐ Is car's seat belt tightly fastened up?
- ☐ Is shoulder belt of car strongly fixed inside the locking lever?
- ☐ Does the main body swing more than 3cm when you shake it?

Completion Checked

☆ Check the above list and if the main body swings more than 3cm, please re-install it according to above instruction.

First 7

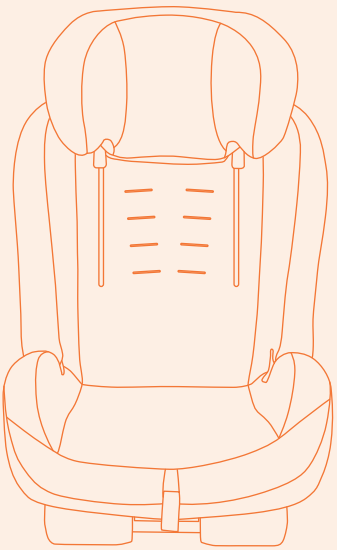

How to use
CHILD MODE

Child mode is designed for children
aged 3 to 7 with weight from 15 to 25kg.

Separation and storage for Child Mode

☆ To easily use child mode, First Seven will let you to safely store unused belt, buckle and pad inside the safety seat.

1

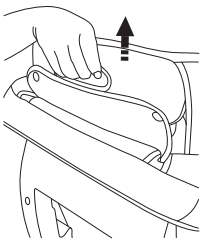

Pull up the back lever of headrest to the maximum height.
By using the lever at the back, take off headrest.
(For detailed detachment method, refer to p.32)

2

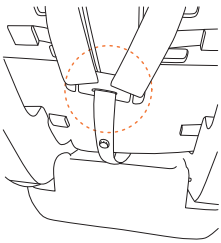

Separate the belt strap from shoulder hanger of the backside of the safety seat.

3

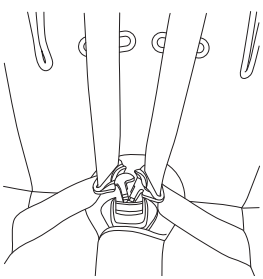

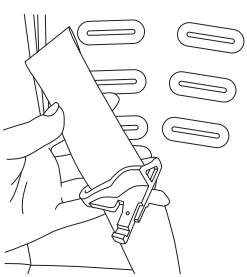

Unfasten all buckles of sabelt, and then take out buckle from the belt strap.

4

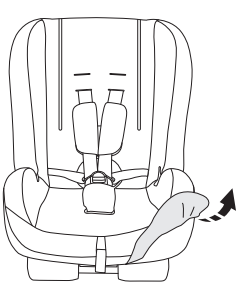

Remove inner seat and back support cushion.
Then, take cover off from bottom.

5

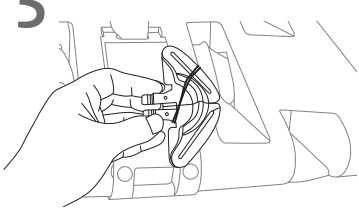

By using rubber band or string, tight up fastening plate of buckle and then store it in the hidden space just as shown in the diagram.

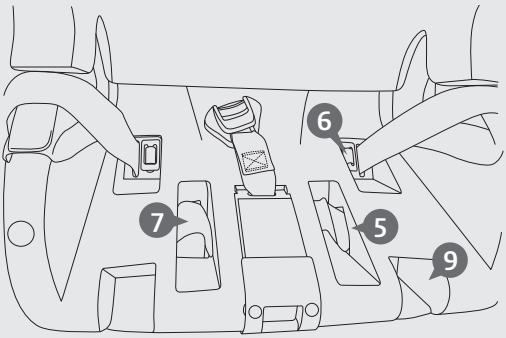

☆ Taking off sponge (memory foam) might damage your safety seat, so please just look at different storage spaces as shown in the above diagram and put things under the sponge. This company does not take any responsibilities of sponge damage that is made during this process.

6

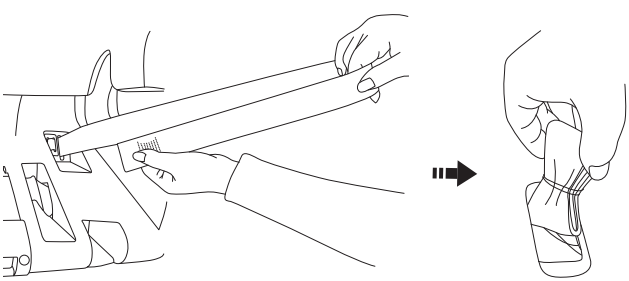

Shoulder belt strap without buckle should be rolled up, and then tie it up with rubber band or string. Then, store it in hidden storage space as shown above.

7

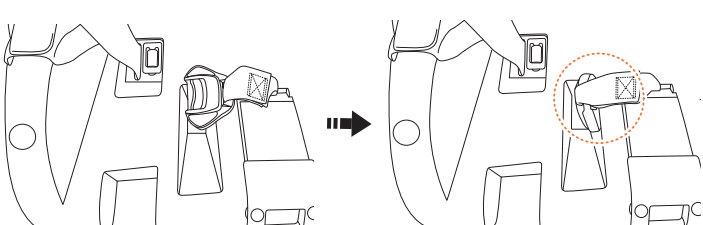

Front pad, which is lower part of the buckle, should be separated from belt cover and then stored in the hidden space as shown above.

8

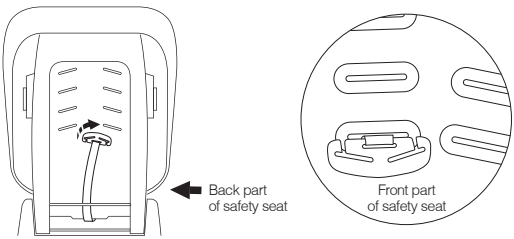

Shoulder belt hanger should be fixed at the entry of shoulder belt at backside of the safety seat as shown above.
Then, push belt adjustment belt in the front to pull it completely.

9

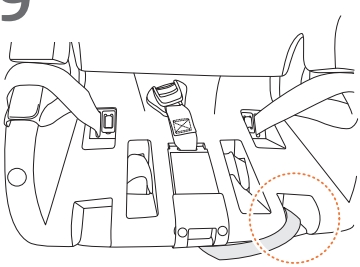

Store belt strap in the location shown above.

10

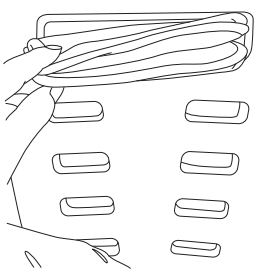

Button cover and shoulder pad should be stored inside hole above the back support part.

MEMO

How to install Child Mode (How to use seat belt)

1

Pull out car's seat belt loosely as shown above.

2

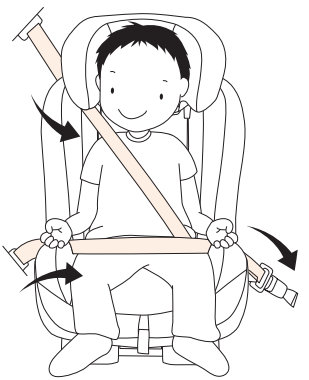

Pull the belt in diagonal direction to pass through underneath headrest and below armrest, and then fasten it with buckle as shown above.

Checklist for Child Mode

☆ Please check the below list after completing the installation.

Completion Checked

- ☐ Is safety belt of the safety seat removed before use?
- ☐ Does the backside of safety seat contact the car's seat?
- ☐ Does safety belt is crosses child's center of chest and rests on the tops of the thighs?
- ☐ Isn't upper part of car's seat belt too close from your child's neck?
- ☐ Is position of headrest appropriate according to your child's head?
- ☐ Is upper part of car's seat belt inserted in home of car's seat belt, which is located above head protector?

☆ Check the above list and if the main body swings more than 3cm, please re-install it according to above instruction.

How to detach headrest

1

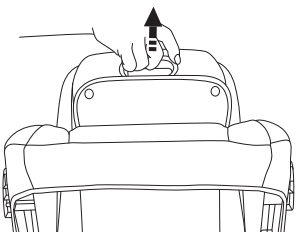

Pull out the headrest to the highest position.

2

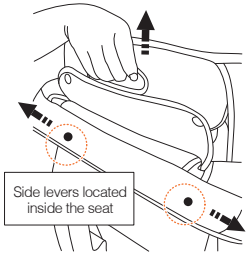

As you pull out the lever of headrest,
push right and left side levers located
on the backside of safety seat
at the same time in order to separate headrest.

3

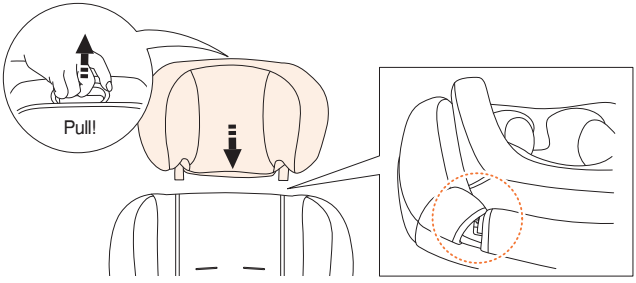

When you attach headrest again, as you pull headrest lever,
set each side rail in the right position and then push it.

How to take off seat cover

☆ When you put the seat cover on, follow below instruction in opposite order.

⚠ **Warning** Do not detach front pad and the main body. This might cause breakdowns.

1

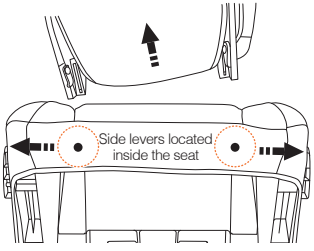

Take off headrest.

2

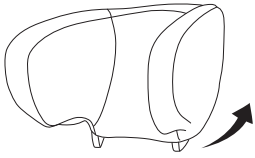

From the backside of headrest to side,
take off the seat cover.

3

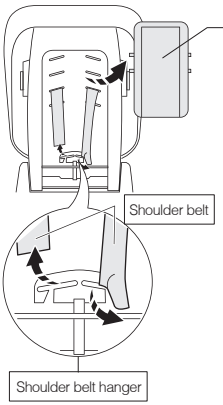

Take off belt cover at the back of main body,
and then take off shoulder belt from its hanger.

Taken off belt should be pulled out from shoulder belt hole.
Take out shoulder pad and fastening plate from shoulder belt.

[Note] If you cannot see shoulder belt hanger

You cannot see shoulder belt hanger because it is pushed inside.
In this case, extend shoulder belt while pressing shoulder belt adjusting lever and you will see the hanger coming up from the back. (refer to p.9)

4

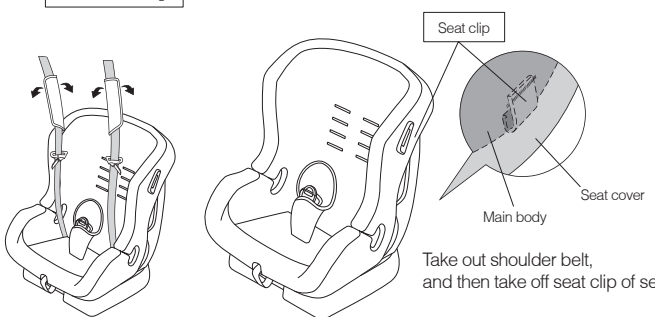

Take out shoulder belt,
and then take off seat clip of seat cover.

5

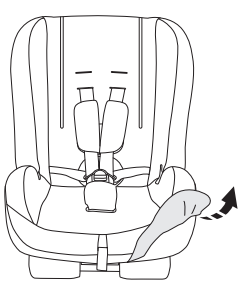

Take off seat cover from bottom to top.

6

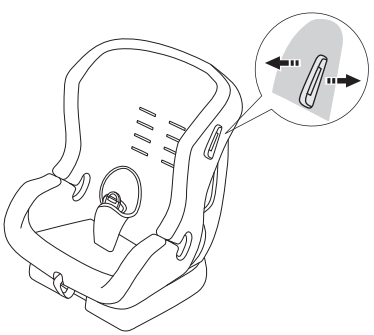

For belt guide, open the sit to right
and left as it is still attached.

⚠ Warning Warning label (yellow label) attached in the front of sewing work cannot be detached.
This company does not take any responsibilities for its detachment.

MEMO

DAIICHI
www.babyseat.net